

*Instruction Manual
for*

ARTISINU®

Art Kits

*Melting Copper - A400,
Melting Platinum - A401*

Visit www.artisinu.com/support to view helpful video instructions, download this manual, and check out the finished kits gallery for ideas.

PATENT PENDING

© Copyright 2009-2010 all rights reserved, C.A.P. Products LLC

BEFORE STARTING

PLEASE READ THIS MANUAL COMPLETELY - WORKING TECHNIQUES AND DRYING TIMES ARE EXTREMELY IMPORTANT. ALSO WATCH THE INSTRUCTIONAL VIDEOS ON WWW.ARTISINU.COM/SUPPORT TO LEARN THE TECHNIQUES AND PLANNING NECESSARY FOR SUCCESSFULLY COMPLETING YOUR ARTISINU ART WORK.

Check to Ensure This Kit includes:

<u>Quantity</u>	<u>Part</u>
1 <input type="checkbox"/>	Art Canvas
2 <input type="checkbox"/>	Paint Tube (P12) BLACK (KIT A401)
1 <input type="checkbox"/>	Paint Tube (P2) PLATINUM (KIT A401)
	OR
2 <input type="checkbox"/>	Paint Tube (P3) BROWN (KIT A400)
1 <input type="checkbox"/>	Paint Tube (P1) COPPER (KIT A400)
1 <input type="checkbox"/>	Mixing Stick
1 <input type="checkbox"/>	Texture Trowel (T1)
1 <input type="checkbox"/>	Brush 50 mm
1 <input type="checkbox"/>	Dry Texture Packet (S1)

Also needed: (NOT included in the kit)

Drop Cloth	1 gallon or larger Mixing Bucket
Measuring Cup	Paper Towels Or Rags
Small paint can	

GETTING STARTED

1. REMOVE ALL CONTENTS FROM THE SHIPPING BOX.
2. CHECK CONTENTS AGAINST THE CHECK LIST.
3. GATHER ALL NEEDED TOOLS, THEN, PREPARE A FLAT STURDY WORK AREA. COVER THE SURFACE WITH A DROP CLOTH. PLACE CANVAS ON SURFACE AND ASSURE THERE IS ROOM TO REACH EACH SIDE OF THE CANVAS.

READ AND UNDERSTAND THE IMPORTANT TIPS AND VIEW THE INSTRUCTIONAL VIDEOS ON THE WEB AT WWW.ARTISINU.COM/SUPPORT.

PREPARING TEXTURE


4. MEASURE 4 3/4 CUPS OF COOL WATER INTO A 1 TO 2 GALLON MIXING BUCKET.
5. POUR 1/3 CONTENTS OF TEXTURE PACKET (S1) INTO THE MIXING BUCKET.
6. STIR TEXTURE MIXTURE UNTIL CONSISTENT AND SMOOTH.
7. POUR AN ADDITIONAL 1/3 CONTENTS OF TEXTURE PACKET INTO MIXING BUCKET AND STIR UNTIL SMOOTH.
8. POUR REMAINING CONTENTS OF TEXTURE PACKET INTO MIXING BUCKET AND STIR UNTIL CONSISTENT AND SMOOTH.
9. APPLY ENTIRE MIXED TEXTURE FROM THE MIXING BUCKET ONTO THE CANVAS.

IMPORTANT TIP: YOU HAVE 30 MINUTES TO WORK IN YOUR TEXTURE PATTERN BEFORE THE TEXTURE STARTS TO HARDEN.

10. USE PROVIDED TROWEL (T1) TO EVENLY SPREAD ENTIRE CONTENTS OF THE TEXTURE ONTO THE CANVAS. **FIGURE 1**

IMPORTANT TIP: TEXTURE WILL BUILD UP IN THE CENTER WHERE THE CANVAS WILL SAG. WORK TO GET AN EVEN THICKNESS COATING OVER THE WHOLE CANVAS ESPECIALLY AT THE EDGES.

FIGURE 1

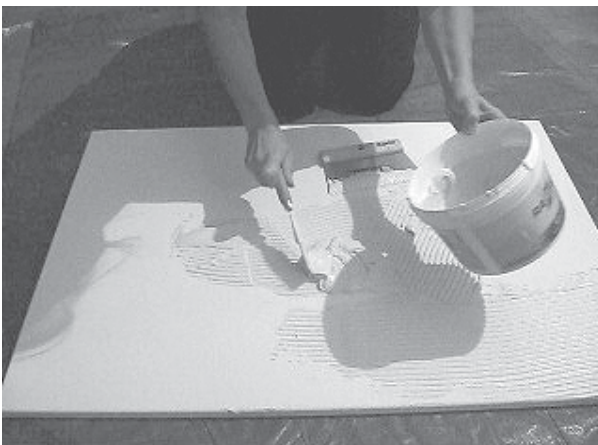

11. USE THE TROWEL (T1) STARTING FROM ONE CORNER OF THE CANVAS AND DRAG QUICKLY IN PARALLEL LINES COMPLETELY ACROSS THE SHORT DIMENSION OF THE CANVAS. HOLD THE TROWEL BETWEEN JUST ONE FINGER AND THUMB. THIS WILL ASSURE A VERY LIGHT PRESSURE. DRAG SO THAT THE TROWEL "CHATTERS" ACROSS THE TEXTURE. KEEP REPEATING UNTIL WAVES BUILD UP IN THE TEXTURE. THIS IS A DIFFICULT LOOK TO ACHIEVE AND WILL GET EASIER AS THE TEXTURE SETS. IT WILL TAKE AT LEAST 5 MINUTES TO ACHIEVE THE WAVES AND DIPS. **FIGURE 2.**

IMPORTANT TIP: VISIT WWW.ARTISINU.COM AND WATCH THE VIDEO FOR THIS KIT. IT WILL DEMONSTRATE EXACTLY HOW TO ACHIEVE THE EFFECT DESCRIBED ABOVE.

12. RUN THE TROWEL (T1) VERTICALLY ALONG EACH EDGE OF THE CANVAS TO REMOVE EXCESS TEXTURE HANGING OVER THE EDGES.

STOP

13. CLEAN ALL TOOLS WITH WATER. ALLOW TEXTURE TO DRY A MINIMUM 6 HRS AT 70 DEGREES (F) BEFORE PAINT IS APPLIED. ALLOW MORE DRYING TIME IF TEMPERATURE IS COLDER OR THERE IS HIGH HUMIDITY.

FIGURE 2



BACKGROUND PAINTING

IMPORTANT TIP: PRESS GENTLY ON THE TEXTURE, IF IT IS NOT SOLID, ROOM TEMPERATURE, AND PURE WHITE, ALLOW MORE DRYING TIME AS THE PAINTING PROCESS COULD CAUSE THE PAINT TO CRACK.

CAUTION: WHEN HANDLING THE CANVAS AFTER TEXTURE IS APPLIED HANDLE ONLY THE WOOD FRAME. BE CAREFUL NOT TO PUSH ON THE CANVAS FROM THE FRONT OR BACK BECAUSE THE TEXTURE COULD CRACK.

IMPORTANT TIP: USE DRY PAINT BRUSH OR TOWEL TO BRUSH AROUND THE EDGES OF THE CANVAS TO REMOVE ANY THIN LOOSE TEXTURE BEFORE PAINTING.

14. SQUEEZE 1 TUBE OF THE BLACK PAINT (P12 - KIT A401 ONLY) OR BROWN (P3 - KIT A400 ONLY) OUT OF SHIPPING TUBE INTO A CUP, CAN, OR BOWL WITH LARGE ENOUGH OPENING TO FIT THE PAINT BRUSH.

15. ADD 2 TABLESPOONS OF WATER THEN STIR THE PAINT UNTIL FULLY MIXED AND CONSISTENT.

16. USE THE PAINT BRUSH TO APPLY THIN COAT ON ENTIRE SURFACE INCLUDING EDGES AND AROUND THE BACK. REPEAT STEPS 11-13 IF NECESSARY.

IMPORTANT TIP: DO NOT OVER PAINT. SPREAD PAINT THIN SO IT BARELY COVERS THE TEXTURE. YOU DO NOT WANT TO FILL IN THE PATTERN YOU HAVE JUST CREATED WITH TOO MUCH PAINT.

IMPORTANT TIP: YOU CAN ELEVATE THE CANVAS ON A BUCKET OR BOX TO KEEP IT OFF THE DROP CLOTH SO YOU CAN PAINT THE EDGES AND AROUND THE BACK SLIGHTLY FOR A MORE PROFESSIONAL LOOK.

STOP

17. CLEAN ALL TOOLS WITH WATER - ALLOW BACKGROUND PAINT TO DRY A MINIMUM 1 HR AT 70 DEGREES (F) BEFORE NEXT PAINT IS APPLIED. ALLOW MORE DRYING TIME FOR COLDER TEMPERATURE OR HIGH HUMIDITY.

FINAL PAINTING

18. SQUEEZE APPROX. 1/2 OF THE PAINT COPPER (P1), (**KIT A400 ONLY**) OR PLATINUM (P2) (**KIT A401 ONLY**), OUT OF SHIPPING TUBE INTO A CUP, CAN, OR BOWL WITH LARGE ENOUGH OPENING TO FIT THE WIDTH PAINT BRUSH.

19. STIR THE PAINT UNTIL FULLY MIXED AND CONSISTENT.

20. USE THE PAINT BRUSH TO **“DRY BRUSH”** ENTIRE CANVAS INCLUDING EDGES WITH A VERY LIGHT, UNEVEN, COAT OF FINAL PAINT COLOR. MAKE SOME AREAS DARKER AND SOME LIGHTER BY VARYING NUMBER OF BRUSH STROKES OVER THE SAME SPOT, MISSING SOME AREAS COMPLETELY, OR APPLYING VARYING PRESSURE ON THE BRUSH.

“DRY BRUSH” - MEANS VIRTUALLY ALL PAINT IS WIPED OFF THE BRUSH AFTER DIPPING. INTO THE PAINT CAN THEN WIPING THE BRUSH ON A PAPER TOWEL OR RAG. PAINTING REQUIRES NO PRESSURE BETWEEN THE BRUSH AND THE CANVAS. SIMPLY DRAG THE BRUSH, DON'T PRESS DOWN, THE WEIGHT OF THE BRUSH IS ENOUGH TO TRANSFER THE PAINT.

IMPORTANT TIP: “DRY BRUSHING” ALLOWS THE BACKGROUND COLOR TO SHOW THROUGH THE BRUSH STROKES. IF YOU HAVE NEVER USED THE “DRY BRUSH” TECHNIQUE FOR PAINTING, PLEASE REVIEW THE INSTRUCTIONAL VIDEO IN THE SUPPORT PAGES AT WWW.ARTISINU.COM

IMPORTANT TIP: WIPING THE PAINTED SURFACE LIGHTLY WITH A DAMP RAG WILL LIGHTEN THE TOP COAT IF MORE BACKGROUND COLOR IS DESIRED OR TOO HEAVY A FINAL COAT IS APPLIED.

STOP

21. TIME TO CLEAN ALL TOOLS WITH WATER AND ALLOW THE CANVAS TO DRY OVER NIGHT BEFORE HANGING.

WE HOPE YOU ENJOY YOUR UNIQUE WORK OF ART AND WE WOULD LOVE TO HEAR FROM YOU ABOUT YOUR EXPERIENCE.

REMEMBER.....YOU WILL BE YOUR OWN WORST CRITIC!

Visit www.artisinu.com to view all our exciting kits.

If you are coordinating home decor, a list of our paint colors is provided on the support pages at www.artisinu.com

Our Guarantee: We want our customers to be 100% satisfied. Unused kits will be fully refunded upon return in original condition. Damaged, defective, or missing parts will be replaced at no charge. We cannot guarantee kits once started for any other reason except as stated. Please call 866-777-8801 for any questions or advice.